



Ignition coil Installation Instructions

This bulletin covers the following Champion Power Equipment models:

C42412	1200/1500w. Generator
C46535	3500/4450w. Generator
C46540	3500/4450w. RV Generator
C41155	5500/6800w. Generator

Note: Read instructions completely before performing service.

1. Remove the yellow recoil housing cover (4-5, 6mm bolts)
2. Remove 2 bolts holding ignition coil (6mm bolts)
3. Remove old ignition coil, exchange wire connection to new coil.
4. Re-bolt coil, DO NOT tighten bolts yet.
5. Using a business card for thickness, place between coil and magnet on fly wheel.
6. Tighten securing bolts on coil at this time and remove business card.
7. Reinstall cover assembly.

If you have any questions, please contact Champion Power Equipment:

Champion Power Equipment, Inc.
10006 Santa Fe Springs Rd.
Santa Fe Springs, CA 90670

Phone: 1-877-338-0999

Email: tech@championpowerequipment.com